

PORTABLE SHADE MARQUEE ASSEMBLY INSTRUCTIONS >>



1. Remove frame from packaging and stand upright. When unpacking the canopy pay attention to how it has been folded. It will be of benefit to you when it comes time to re-pack the tent later.

2. Pull each corner outwards until frame stands approximately 1 metre across each side.

3. Place canopy over the top of the frame. Ensure centre point of canopy sits over centre post of frame.



4. Locate each corner of the canopy and make sure it sits snugly over the corresponding corner post and that the Velcro underneath attaches.

5. With each corner and the centre of the canopy in place, evenly drape the bulk of the canopy between the posts. You can now start to expand the frame by slowly pulling each corner outwards a little at a time.



6. When the frame has been expanded enough to allow you to climb underneath, locate the centre post and push it upwards. This will automatically expand the frame to its maximum size.

7. To lock in the corners, push the frame struts up the leg until it passes the locking clip. Once each corner is locked in place you can extend the legs to the desired height. The legs use the same ring pull locking mechanism as the corner posts. It is important to only extend each leg one peg at a time and work from one leg to the next in a clockwise direction.

8. The inside of the canopy has tie down cords, secure these to the frame.

9. Important. Secure the Portable Shade Marquee well.



Never under-estimate the strength of the wind. Use the pegs and ropes provided. You may find it useful (at your own discretion) to tie the Portable Shade Marquee off to a tree, pole, fence or motor vehicle.

DO NOT USE THIS PORTABLE SHADE MARQUEE IN EXTREME WEATHER CONDITIONS.

Promoting sun safety in the outdoors

The portable shade hiring initiative is a partnership between the Health Promotion Connections and Queensland Health to help promote sun safety in the outdoors.